


Clip version - Drawer drilling


Drawer drilling

Drawer with frontal (three-sided)
(view from below)

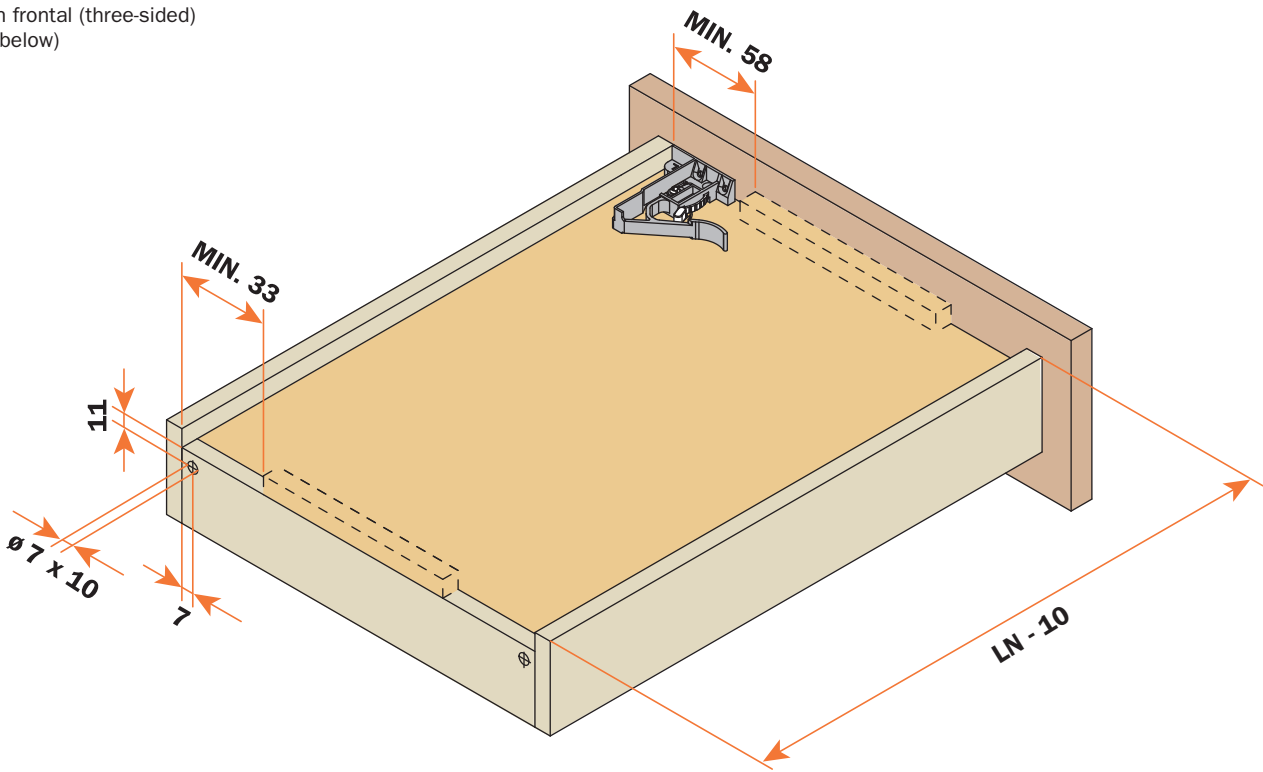


Drawer drilling

Internal drawer (four-sided)
(view from below)

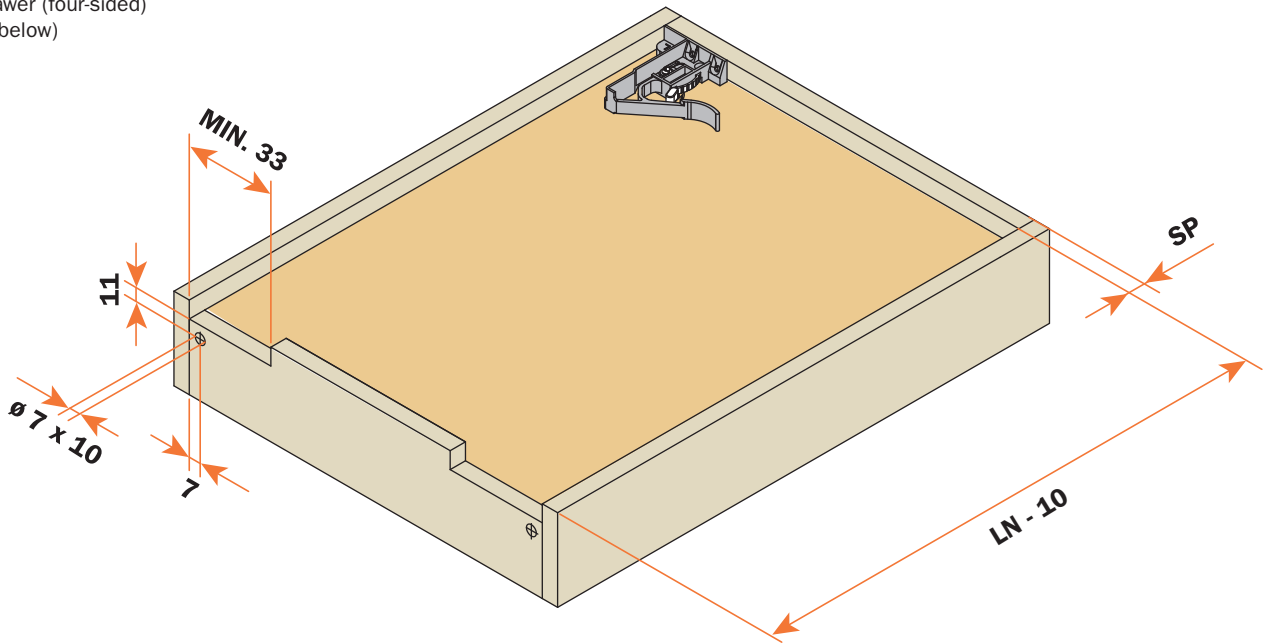


Clip version - Technical information

Fixing clip

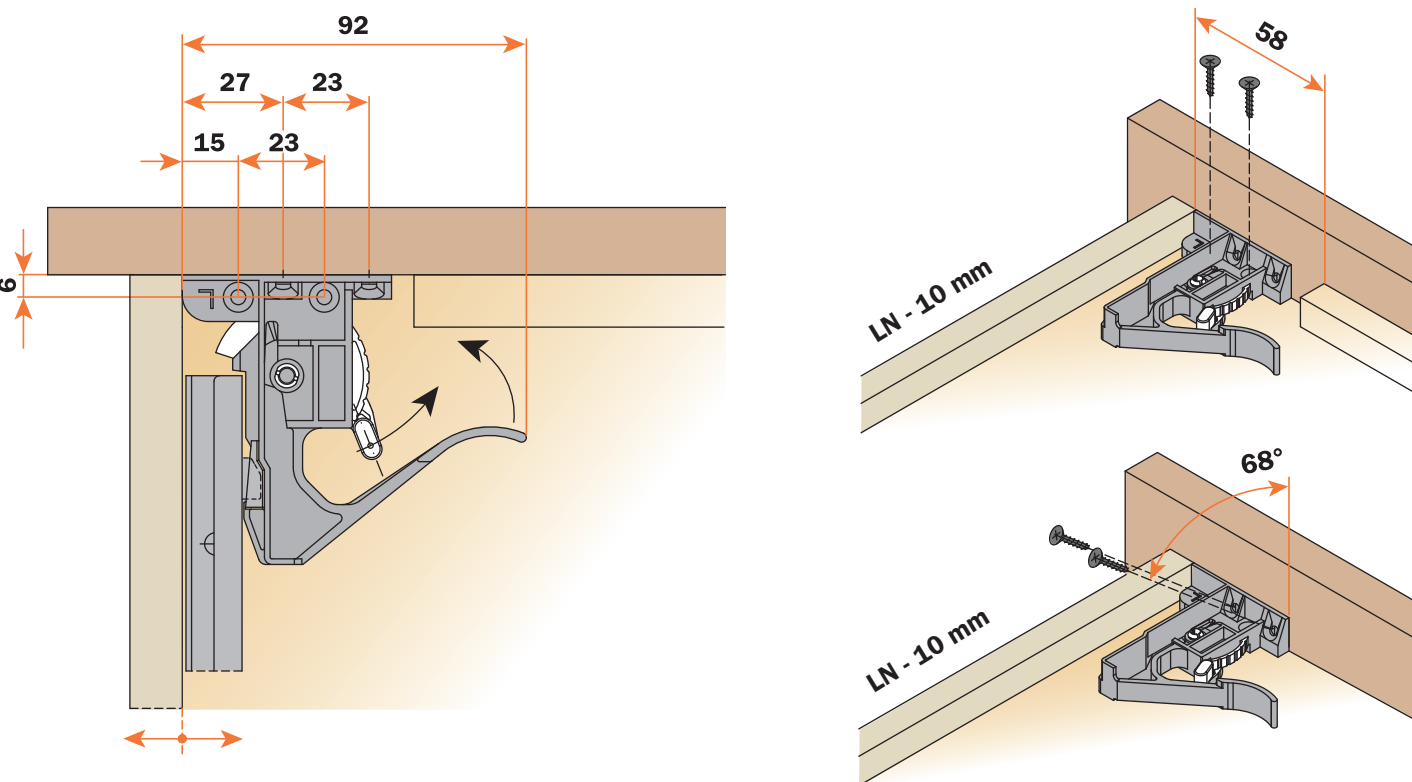

Drawer adjustment

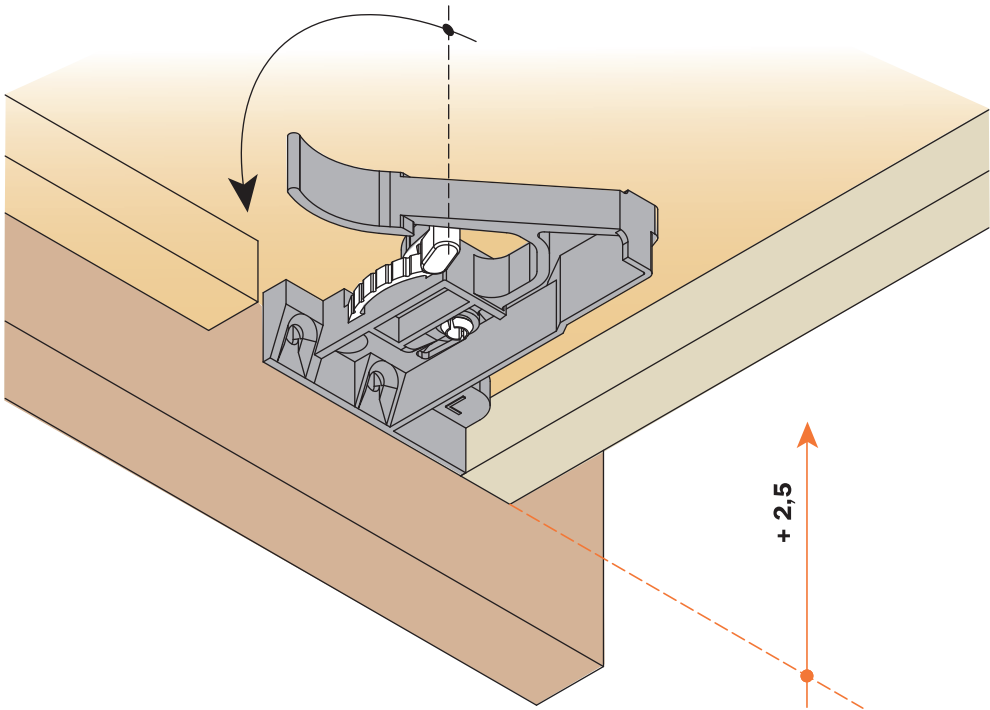


Drawer height adjustment (+ 2,5 mm) using the lever indicated

Clip version - Installation and removal of the drawer

INSTALLATION OF THE DRAWER

Extend the runners.

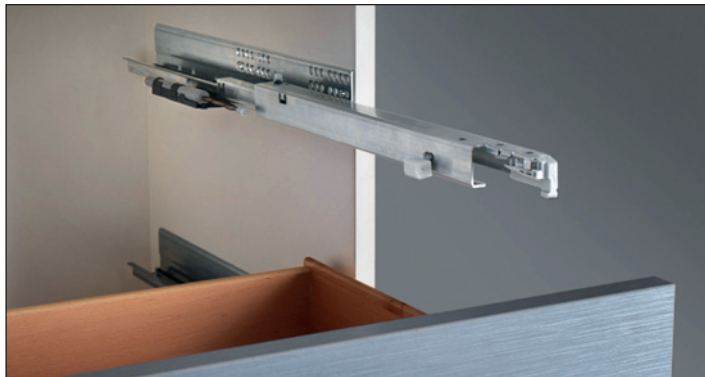

Place the drawer on the runners.



Close the drawer in order to engage the runners onto the clips.



REMOVAL OF THE DRAWER

Push or pull the frontal to open the drawer.



Open the drawer completely.



Disengage the clips.



Pull the drawer forwards.

